


Model# K600

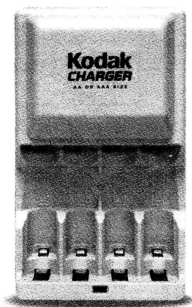

- Do not modify or disassemble.
- If something appears wrong with the charger and/or batteries, disconnect from the electric outlet immediately.
- Keep out of reach of infants. Children may use only under strict parental supervision.
- Store in a dry cool place.

NI-MH	
To use (discharge) the batteries	32°-122°F (0°-50°C)
To charge the batteries	32°-95°F (0°-35°C)
To store the batteries	-4°-86°F (-20°-30°C)

AA/AAA Charger: KODAK Ni-MH/Ni-Cd Charger Operating Instructions

- 2 Thank you for purchasing the KODAK K600 Battery Charger. Please read these instructions for safe operation.

Features

- Charges AA and AAA Ni-MH or Ni-Cd rechargeable batteries.
- Charge up to 4 AA or up to 4 AAA batteries.

Model K600 Battery Charger

WARNING!

- Charge only Ni-MH or Ni-Cd AA/AAA rechargeable batteries. Other types of batteries may burst causing personal injury and damage.
- Risk of electric shock. Dry location use only.
- Do not operate charger if it has been damaged.
- To reduce the risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning.
- Insert batteries correctly by matching + (positive) and - (negative) ends (terminals) of the battery to the same + and - position in the charger.
- Be sure to use charger with correct voltage.
- Do not insert any objects (such as a screwdriver or metal wires) into the charger.

4 Ni-MH & Ni-Cd: AA/AAA Batteries

WARNING!

- Do not use batteries with their + (positive) and - (negative) ends (terminals) reversed.
- Do not modify or disassemble.
- Never expose to heat or fire.
- If any liquid from the battery comes in contact with clothes or skin, wash with clean water immediately and consult a doctor at once.
- Stop using batteries immediately if you notice anything wrong with them (such as leakage, color change or deformity)
- Do not use charged and discharged batteries together.
- When charging do not mix Ni-MH or Ni-Cd type battery same brand batteries when charging.
- When using 2 or more batteries in a device, make sure they were charged simultaneously.
- Charge the batteries before using.
- Do not allow batteries to touch metal objects such as keys or coins.

5 DANGER!

Failure to comply with all of the above warnings may cause electric shock, battery damage/leakage, overheating, explosion, or fire and can result in severe personal injury and/or damage to property.

Operating Instructions

Light is on (steady) while charging and turns off after 17 hours.

HOW TO CHARGE

1. Place 2 or 4 of AA or 2 or 4 of AAA size batteries into the charger so that the + (positive) and - (negative) ends (terminals) of the batteries correspond to the same + and - marking in the charger.
2. Plug the charger into an electrical receptacle (outlet). The charge indicator light is illuminated and battery charging begins. (NOTE: Do not insert or remove batteries during this charging process) The charging cycle time depends on battery type. See specification chart.

HOW TO INSERT THE BATTERIES

- Please charge 2 cells or 4 cells. (1 cell or 3 cells can not be charged.)

6 AA size



AAA size



Do not charge AA and AAA cells together



Kodak Model No.	K600	K600E
Input	AC120V 50-60HZ 5W	AC230V
Output	DC2 4V 160-270mA x 2(AA) 100-180mA x 2(AAA)	
LED Indication	ON steady charging OFF - Timer off	
Battery/ Charge time approximate	Ni-MH AA (2100mAh)	13.0 hrs
	Ni-MH AA (1850mAh)	11.5 hrs
	Ni-MH AA (1700mAh)	10.0 hrs
	Ni-MH AAA (800mAh)	8 hrs
	Ni-MH AAA (750mAh)	7.5 hrs
Dimensions (LxWxH)	11.3cm x 6.6cm x 3.7cm	
Weight	approx. 230g (8.1 oz.)	

Please dispose of this product in accordance with all applicable regulations. This product contains a small amount of lead in the circuit boards. Disposal may be regulated. For disposal or recycling information, please contact your local authorities or, in the U.S.A., contact the Electronics Industry Alliance website at www.eiae.org.

- 8 **Guarantee:** This battery charger and batteries are guaranteed against defects in material and workmanship for one year after date of purchase. Any device damaged by these batteries due to such defect will be repaired or replaced (at our option) if sent with batteries to Kodak. To Claim: In the U.S. and Canada call toll free, 1-888-375-6325 or 1-800-242-2424, between the hours of 9:00 a.m. and 8:00 p.m. (EST) Monday through Friday for authorization and mailing address. Send charger or batteries prepaid with your address and phone number, copy of proof of purchase and description of usage. Replacement charger or batteries will be mailed prepaid. No cash refunds will be given. Outside the U.S. and Canada, check with your local Kodak house or go to the following URL for a support number in your area:
<http://www.kodak.com/include/international.shtml>



Made in China for
EASTMAN KODAK COMPANY
343 State Street
Rochester, New York 14650-0811

www.kodak.com/go/batteries