

Battery

The battery installed in this motorcycle is a sealed type, so it is not necessary to check the battery electrolyte level or add distilled water.

The sealing strip should not be pulled off once the specified electrolyte has been installed in the battery for initial service.

Since the electrical system of this motorcycle is designed to use only a sealed battery, do not replace it with a conventional battery.

CAUTION

Never remove the sealing strip, or the battery can be damaged.


Do not install a conventional battery in this motorcycle, or the electrical system cannot work properly.

NOTE

- *If you charge the sealed battery, never fail to observe the instructions shown in the label on the battery.*

Battery Removal

- Remove the seat.
- Take off the screws and remove the tool kit compartment.

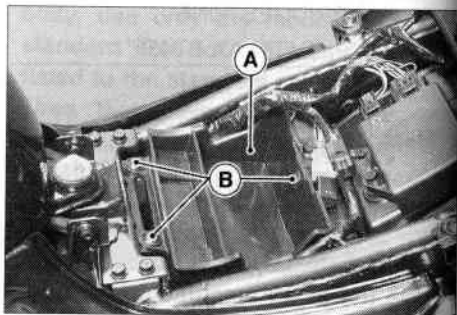

A. Tool Kit Compartment

B. Screws