


Brake/Clutch Lever Adjusters

There is an adjuster on both the brake and clutch levers. Each adjuster has 5 positions so that the released lever position can be adjusted to suit the operator's hands. Push the lever forward and turn the adjuster to align the number with the arrow mark on the lever holder. The distance from the grip to the released lever is minimum at Number 5 and maximum at Number 1.

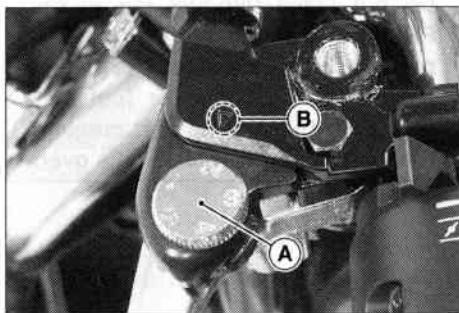


A. Adjuster

B. Mark

Stands

The motorcycle is equipped with two stands: a center stand and a side stand.

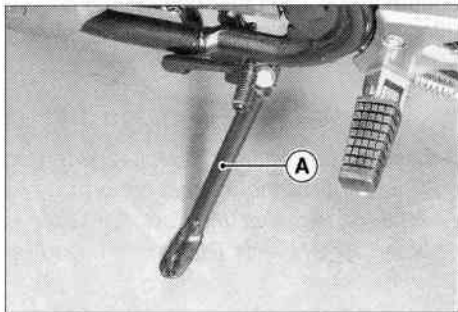

A. Side Stand

NOTE

- When using the side stand, turn the handlebar to the left.

Whenever the side stand or center stand is used, make it a practice to kick the stand fully up before sitting on the motorcycle.