

A. Spark Plug Cap


- Unscrew the spark plugs with a plug wrench in the tool kit.

CAUTION

When unscrewing the spark plugs, be careful not to damage the cylinder head cover with the plug wrench.

NOTE

- Spark plug installation is performed in the reverse order of removal.
- Fit the plug cap securely onto the spark plug, and pull the cap lightly to make sure that it is properly installed.

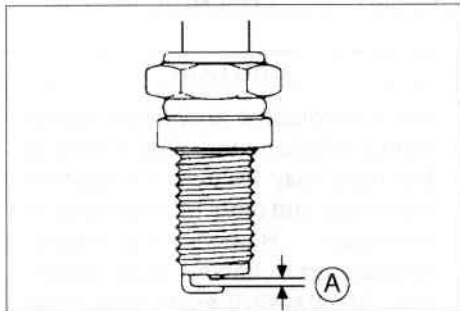

A. 0.6 ~ 0.7 mm (0.024 ~ 0.028 in.)