


A. Choke Lever

B. 2 ~ 3 mm (0.08 ~ 0.12 in.)

Adjustment

- Remove the fuel tank (see Spark Plug Removal in the Spark Plugs section).
- Loosen the locknut at the middle of the choke cable, located above the engine, and turn the adjuster until the cable has the proper amount of play.

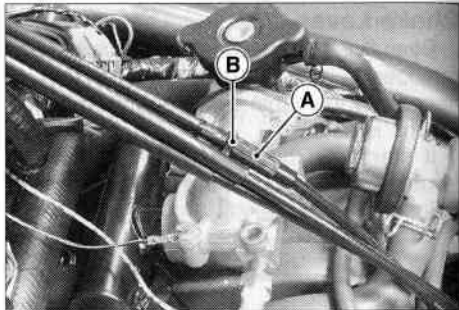

A. Adjuster

B. Locknut

- Tighten the locknut after adjustment.