


A. Oil Level Gauge C. Lower Level Line
B. Upper Level Line D. Oil Filler Cap

- If the oil level is too high, remove the excess oil through the oil filler opening using a syringe or some other suitable device.
- If the oil level is too low, add oil to reach the correct level. Use the same type and brand of oil that is already in the engine.

CAUTION

If the engine oil gets extremely low or if the oil pump does not function properly or oil passages are clogged, the oil pressure warning light will light. If this light stays on when the engine speed is above 1,500 r/min (rpm), stop the engine immediately and find the cause.

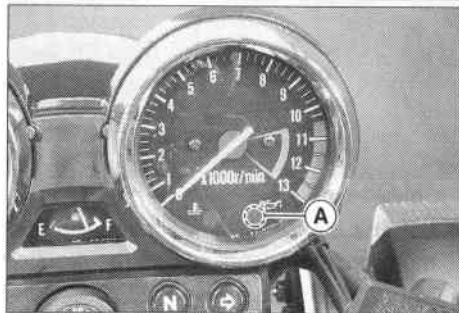

A. Oil Pressure Warning Light