


Brake Light Switches

When either the front or rear brake is applied, the brake light goes on. The front brake light switch requires no adjustment, but the rear brake light switch should be adjusted in accordance with the Periodic Maintenance Chart.

Inspection

- Turn the ignition key to "ON".
- The brake light should go on when the front brake is applied.
- If it does not, ask your authorized Kawasaki dealer to inspect the front brake light switch.
- Check the operation of the rear brake light switch by depressing the brake pedal. The brake light should go on after about 15 mm (0.6 in.) of pedal travel.

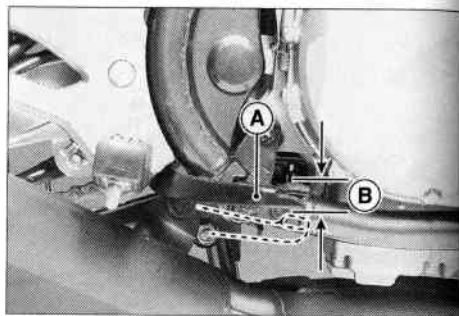

A. Brake Pedal

B. 15 mm (0.6 in.)

- If it does not, adjust the rear brake light switch.

Adjustment

- To adjust the rear brake light switch, move the switch up or down by turning the adjusting nut.