


**A. Main Fuse**

**B. Starter Relay**


**⚠ WARNING**

**Do not use any substitute for the standard fuse.**

**Replace the blown fuse with a new one of the correct capacity, as specified on the junction box and main fuse case.**

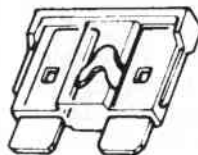

**Normal**

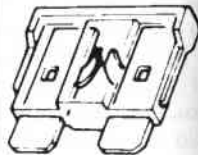

**Failed**