


Fuses

Fuses are arranged in the junction box located under the seat. The main fuse is mounted on the starter relay inside the right side cover. If a fuse fails during operation, inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage.

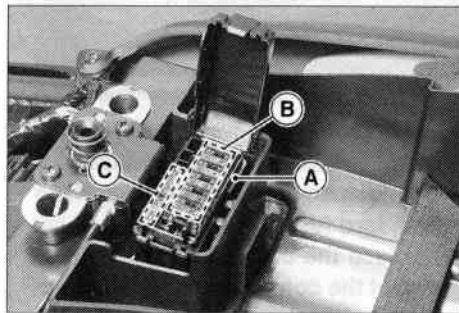

A. Junction Box
B. Fuses

C. Spare Fuses