



Starting the Engine


- Turn the fuel tap lever to the ON position.

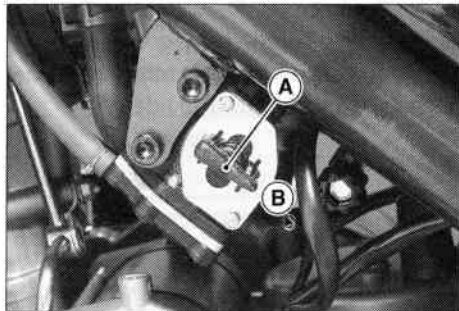

A. Fuel Tap

B. ON position

- Check that the engine stop switch is in the  position.
- Turn the ignition key to "ON."
- Make certain the transmission is in neutral.

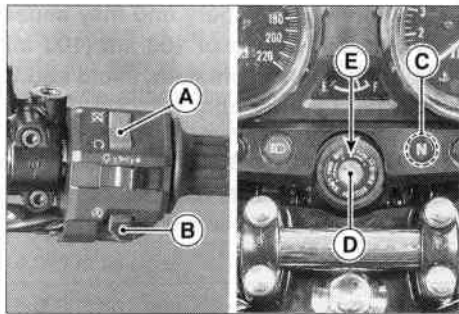

A. Engine Stop Switch

B. Starter Button

C. Neutral Indicator Light

D. Ignition Switch

E. ON position

- If the engine is cold, pull the choke lever all the way.