

## NOTE


- A permanent type of antifreeze is installed in the cooling system when shipped. It is colored green and contains ethylene glycol. It is mixed at 50% and has the freezing point of  $-35^{\circ}\text{C}$  ( $-31^{\circ}\text{F}$ ).

### Coolant Level Inspection

- Remove the seat.
- Situate the motorcycle so that it is perpendicular to the ground.
- Check the coolant level through the coolant level gauge on the reserve tank. The coolant level should be between the F(Full) and L(Low) lines.

## NOTE

- Check the level when the engine is cold (room or atmospheric temperature.)

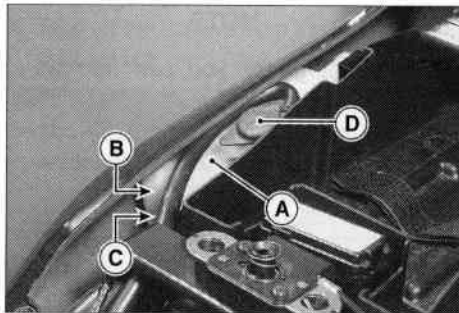

A. Reserve Tank

B. F(Full) Line

C. L(Low) Line

D. Cap

- If the amount of coolant is insufficient, remove the cap from the reserve tank and add coolant through the filler opening to the F(Full) level line.
- Install the cap.