


## Seat Lock

To remove the seat, insert the ignition key into the seat lock, turn the key to the right, and pull up on the rear of the seat. The seat is locked when pushed back into place.

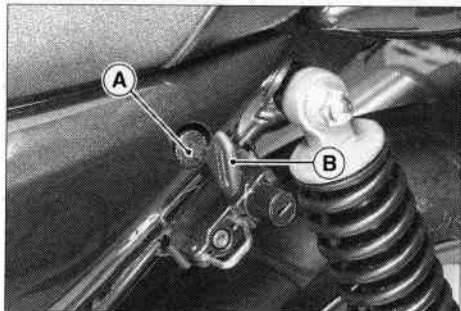


A. Seat Lock

B. Ignition Key

## Tying Hooks

When tying up light loads to the seat, use the hooks on the left and right side under the seat.

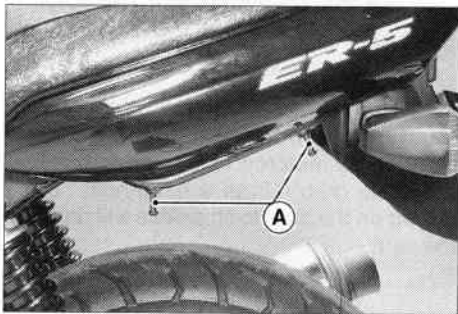

A. Tying Hooks