


A. Throttle Grip

B. 2 ~ 3 mm (0.08 ~ 0.12 in.)

If there is improper play, adjust it.

Adjustment

- Loosen the locknut at the throttle grip, and turn the adjuster until the proper amount of throttle grip play is obtained.

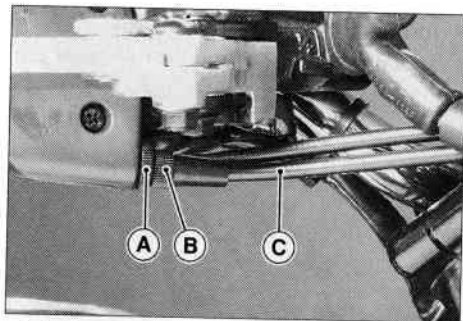

A. Locknut

B. Adjuster

C. Throttle Cable

(Accelerator Cable)

- Tighten the locknut.
- If the throttle cables can not be adjusted by using the cable adjuster at the throttle grip, use the upper and lower nuts at the lower ends of the throttle cables.
- First give the throttle grip plenty of play by turning the adjuster at the grip in fully.
- Remove the fuel tank (see Spark Plug Removal in the Spark Plugs section).