

coemar

ProSpot LX

***manuale
di istruzioni
instruction
manual***

***1^a edizione, dicembre 2000
1st edition, december 2000***

ProSpot LX

numero di serie/serial number

data di acquisto/date of purchase

fornitore/retailer

indirizzo/address

cap/città/suburb

provincia/capital city

stato/state

tel./fax/

*Prendete nota, nello spazio apposito, dei dati relativi al modello e al rivenditore del vostro **ProSpot LX**: in caso di richiesta di informazioni, pezzi di ricambio, servizi di riparazione o altro ci permetteranno di assistervi con la massima rapidità e precisione.*

*Please note in the space provided above the relative service information of the model and the retailer from whom you purchased your **ProSpot LX**: This information will assist us in providing spare parts, repairs or in answering any technical enquiries with the utmost speed and accuracy.*

ATTENZIONE: la sicurezza dell'apparecchio è garantita solo con l'uso appropriato delle presenti istruzioni, pertanto è necessario conservarle.

WARNING: the security of the fixture is granted only if these instructions are strictly followed; therefore it is absolutely necessary to keep this manual.

Index

- 1. Packaging**
- 2. Transportation**
- 3. Important safety information**
- 4. Lamp: installation and replacement**
- 5. Operating voltage and frequency**
- 6. Mounting the unit**
- 7. Mains connection**
- 8. Signal connection**
- 9. Powering up**
- 10. DMX addressing**
- 11. Display panel functions**
 - 11.1. Turning on the ProSpot LX without articulated movement**
 - 11.2. Resetting the electronic lamp life counter**
 - 11.3. test**
- 12. DMX 512 channel functions**
- 13. Aligning the lamp in the optical path**
- 14. Automatic repositioning features**
- 15. Gobo replacement**
- 16. Altering the operating voltage and frequency**
(Reserved for technical staff only)
 - 16.1 Selecting the voltage on the autotransformer**
 - 16.2 Selecting the frequency on the power supply of the ProSpot LX**
- 17. Maintenance**
- 18. Electronic alignment of motors**
- 19. Error messages**
- 21. Spare parts**

Congratulations on having purchased a **coemar** product. You have assured yourself of a fixture of the highest quality, both in componentry and in the technology used. We renew our invitation to you to complete the service information on the previous page, to expedite any request for service information or spares (in case of problems encountered either during, or subsequent to, installation). This information will assist in providing prompt and accurate advice from your **coemar** service centre.

1. Packaging

Following the instructions and procedures outlined in this manual will ensure the maximum efficiency of this product for years to come.

Open the packaging and ensure that no part of the equipment has suffered damage in transit. In case of damage to the equipment, contact your carrier immediately by telephone or fax, following this with formal notification in writing.

packing list

Ensure the packaging contains:

- 1 **ProSpot LX**
- 1 **instruction manual**
- 1 **T 8A fuse**

2. Transportation

The **ProSpot LX** should be transported in its original packaging or in a coemar approved flight case.

We recommend the use of a suitable flight case, which will stop the articulated movement of the **ProSpot LX** during transportation.

3. Important safety information

Fire prevention:

1. **ProSpot LX** utilises a Philips MSD 250W/2. The use of any other lamp is not recommended and will null and void the fixture's warranty.
2. Never locate the fixture on any flammable surface.
3. The minimum distance from flammable materials: 0,5 m.
4. The minimum distance from the closest illuminable surface: 2 m.
5. Replace any blown or damaged fuses only with those of identical values. Refer to the schematic diagram if there is any doubt.
6. Connect the projector to main power via a thermal magnetic circuit breaker.

Prevention of electric shock:

1. High voltage is present in the internals of the unit. Isolate the projector from mains supply prior to performing any function, which involves touching the internals of the unit, including lamp replacement.
2. For mains connection, adhere strictly to the guidelines outlined in section 7 of this manual.
3. The level of technology inherent in the **ProSpot LX**, requires the use of specialised personnel for all service applications; refer all work to your authorised **coemar** service centre.
4. A good earth connection is essential for proper functioning of the projector.
Never operate the unit without proper earth connection.
5. The fixture should never be located in an exposed position, or in areas of extreme humidity. A steady supply of circulating air is essential.

Protection against ultraviolet radiation:

1. Never turn on the lamp if any of the lenses, filters, or the housing is damaged, their respective functions will only operate efficiently if they are in perfect working order.
2. Never look directly into the lamp when it is operating.

Safety:

1. The projector should always be installed with bolts, clamps, and other fixings, which are suitably rated to support the weight of the unit.
2. Always use a secondary safety chain of a suitable rating to sustain the weight of the unit in case of the failure of the primary fixing point.
3. The external surfaces of the unit at various points may exceed 80°C. Never handle the unit until at least 10 minutes have elapsed since the lamp was turned off.
4. Always replace the lamp if any physical damage is evident.
5. Never install the fixture in an enclosed area lacking sufficient airflow; the ambient temperature should not exceed 45°C.
6. A hot lamp may explode. Always wait for at least 10 minutes to elapse after the unit has been turned off prior to attempting to replace the lamp.
Always wear suitable hand protection when handling lamps.

4. Lamp: Installation and replacement

ProSpot LX utilises a Philips MSD 250W/2 or equivalent.

The lamp is available from your authorised **coemar** sales agent:

coemar cod.	105214/1
power	250 w
luminous flux	18.000 lm
colour temperature	8.500° K
lamp base	GY 9,5
approximate life	2000 hours

Attention

Disconnect mains prior to opening up the unit

The fixture's internal temperature can reach 150° C after 5 minutes with a maximum peak of 350° C; ensure that the lamp is cold prior to attempting removal. The fixture should be allowed to stand and cool for 10 minutes prior to its removal.

The lamps are part of the mercury vapour family of discharge lamps and must be handled with great care. The lamps operate at high pressure, and the slight risk of explosion exists if operated over their recommended lamp life.


We recommend, therefore, that the lamp be replaced within the manufacturer's specified lamp life.

installing the lamp

- 1) Using a Philips head screwdriver, remove the 4 screws **A** located at the front and rear of the projector, which affix the top cover **B**, as shown in the diagram below.



- 2) Remove the housing **B**.

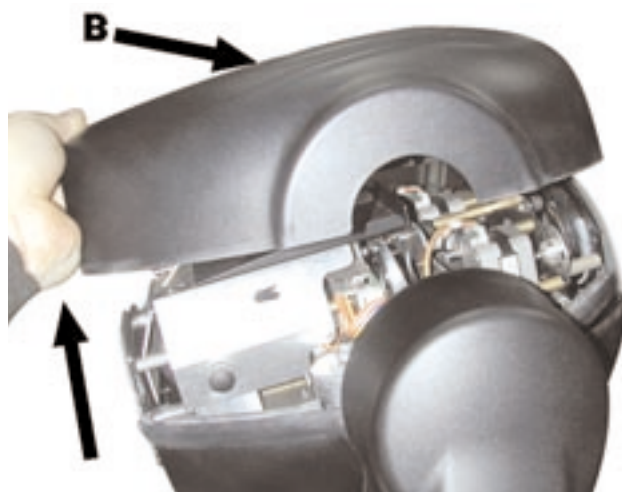


- 3) Remove the three thumbscrews **C**, which hold the lamp-cover in place, and remove the cover.




English


4) Locate the lampholder **D**

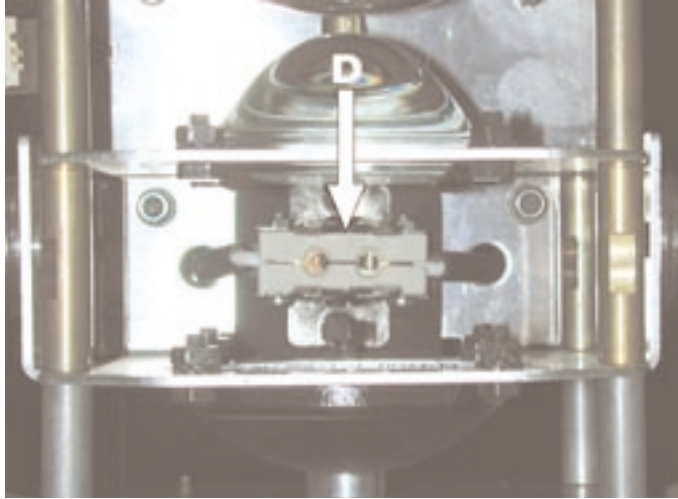

- 5) Insert the lamp. The lamp is manufactured from quartz glass and should be handled with care; always adhere to the instructions supplied in the lamp's packaging. Never touch the glass directly; use the tissue provided in the lamp's packaging. The GY 9,5 lampholder is asymmetrical in construction, with one lamp pin larger than the other is. **DO NOT USE UNDUE FORCE.** In case of difficulty, inspect for physical damage and then repeat the installation procedure.

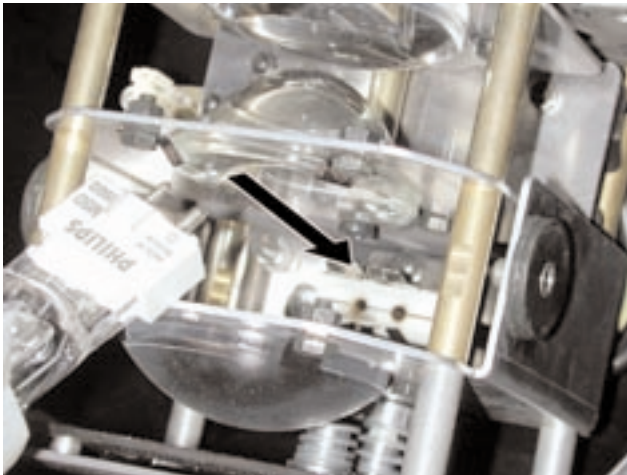

- 6) The optimal gap between the lamp and the parabolic reflector is around 2 to 3 mm. If this is not the case, rotate the two adjusting thumbscrews located at the rear of the projector as indicated in the section of this manual entitled **"Aligning the lamp in the optical path"**. **The lamp must under no circumstances come into contact with the reflector or other components of the optical system.**

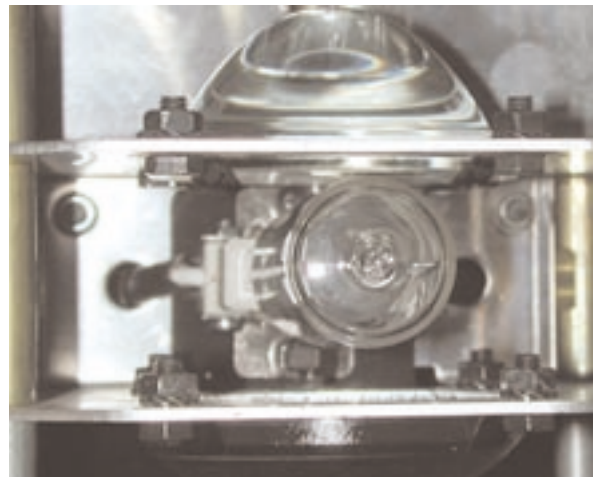


- 7) Reposition the lamp cover and replace the three screws **C** previously removed. Replace the housing **B** and refasten the four screws **A** as per the original condition of the **ProSpot LX**. Prior to switching on the projector with the new lamp installed, reset the lamp life counter as described in section **11 "Display panel functions"**.

We recommend that replacement lamps be realigned in the optical path of the lamp so as to avoid any accidental overheating of the internal components of the fixture. This procedure is described in the section of this manual entitled **"Aligning the lamp in the optical path"**.

5. Operating voltage and frequency

The projector may operate at 100-115-208, 230 or 245V .at 50 or 60 Hz; **coemar** presets (barring specific requests), an operating voltage of 230V and a frequency of 50Hz. The operating voltage and frequency of the projector is noted on the base of the unit.

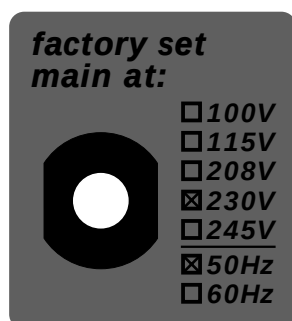

If this preset does not correspond with the conditions in your particular country of operation, follow the instructions in the appropriate section of this manual.

Incorrect frequency and voltage selection will detrimentally affect the operation of the projector.

6. Installing the unit

mounting

ProSpot LX can operate in any mounting position.

The structure from which the unit is hung should be of sufficient rating to hold the weight of the unit, as should any clamps used to hang the unit. The structure should also be sufficiently rigid so as to not move or shake whilst the **ProSpot LX** moves during its operation.


The two mounting holes Ø13 mm (**A**) on the base of the **ProSpot LX** allows the projector to have hook clamps fitted for the purpose of hanging.

safety chains

The use of a safety chain fixed to the **ProSpot LX** and to the primary suspension structure is highly recommended to protect against the accidental failure, however unlikely, of the primary suspension point.

If using an aftermarket safety chain not manufactured by **coemar**, ensure that it is of a sufficient rating to hold the weight of the unit.

The safety chain is attached by means of the two holes **B** located in the base of the unit as shown in the diagram.

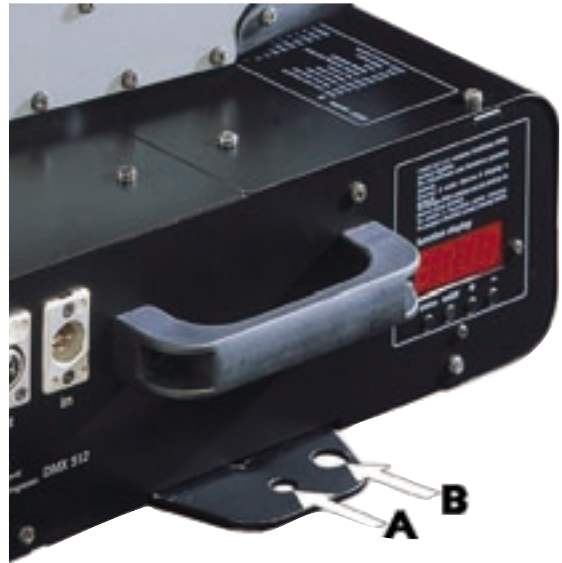

movement

The projector has an articulated movement of 530° in the base and 284° through its yoke; **DO NOT** obstruct the articulated movement in any way.

protection against liquids

The projector contains electric and electronic components that must not come into contact with water, oil, or any liquid.

risk of fire

Each fixture produces heat and must be installed in a well-ventilated position. The minimum recommended distance from flammable material is 0.5m. Minimum distance from the object being illuminated is 2m.

forced ventilation

You will note that the projector's housing contains several air entry points and fan outlets, positioned both on the head and the base of the unit; under no circumstances should any of these points be obstructed!

Obstruction of any of these points will result in the over-heating of the unit, detrimentally and seriously affecting the proper operation of the **ProSpot LX**.

On this point, refer to section **18 "Electronic motor alignment"**, subsection temperature (**temp**).

7. Mains connection

cable preparation


The mains cable provided is thermally resistant, complying with the most recent international standards.

NB: In case of cable replacement, similar cable with comparable thermal resistant qualities must be used exclusively (cable 3x1,5 Ø external 8 mm, rated 300/500V, tested to 2KV, operating temperature -40° +180°).

mains connection

ProSpot LX can operate at voltages from 208V-230V-240V at 50 or 60Hz (operating voltage and frequency can be selected as described in section 5 and 16 of this manual). Prior to connecting the unit to your mains supply, ensure that the model in your possession correctly matches the mains supply available to you.

For connection purposes, ensure your plug is of a suitable rating: 2,1 amps at 245, 230v, 208V and 4,7 at 100 and 115V. Locate the mains cable, which exits the base of the unit and connect as shown below:

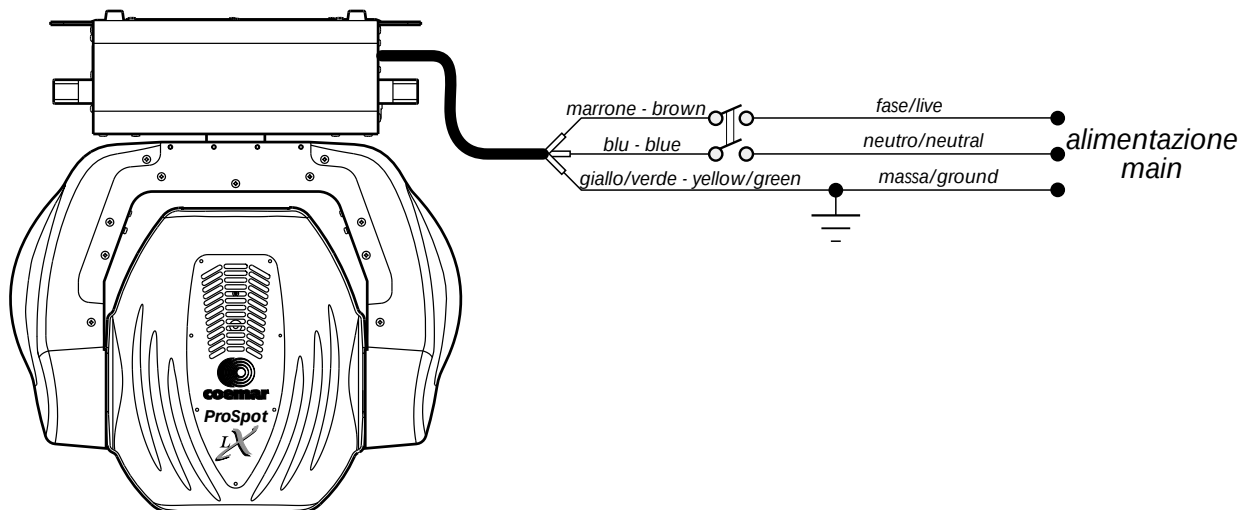

protection

The use of a thermal magnetic circuit breaker is recommended for each **ProSpot LX**.

A good earth connection is essential for the correct operation of the fixture. Strict adherence to regulatory norms is strongly recommended.

8. Signal connection


Control signal is digital and is transmitted via two pair screened $\varnothing$ 0,5 cable.

Signal type is DMX 512, conforming to international standard; in order to reduce production costs and to allow easy worldwide availability of parts, coemar utilises XLR 3 plugs and sockets for signal connection. Pin connection conforms to international standards:

pin 1= screening 0 V

pin 2= data -


pin 3= data +

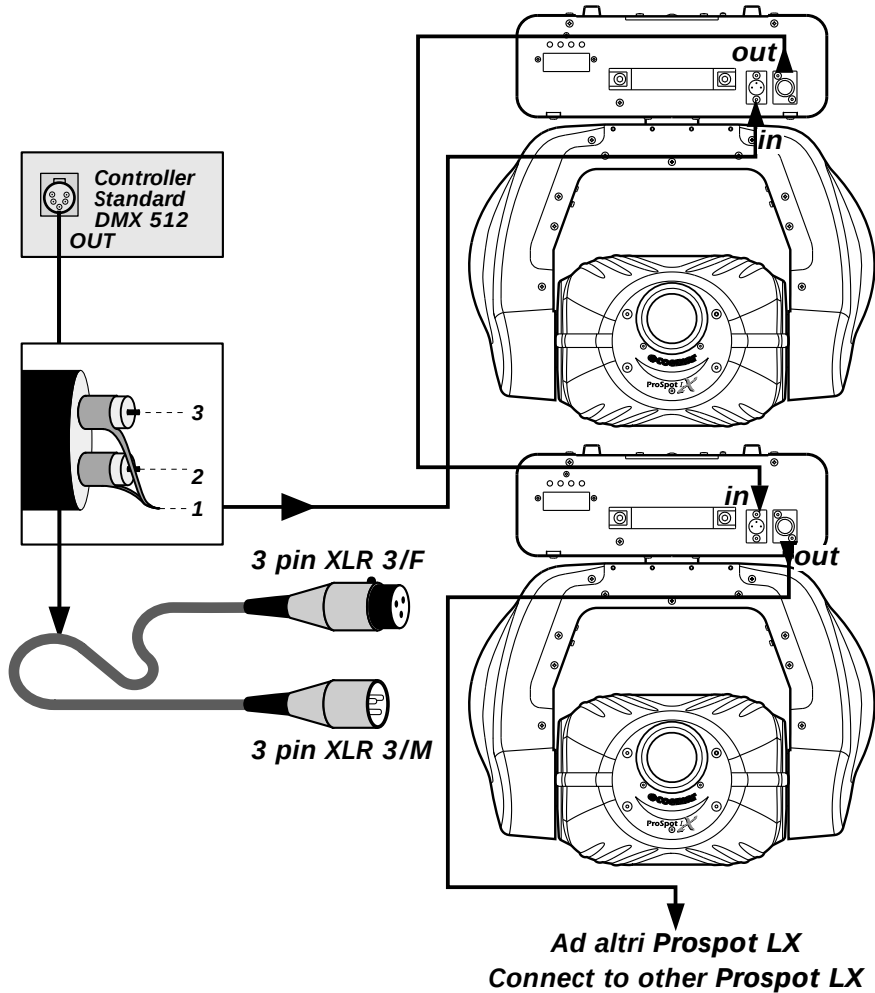

Should your DMX 512 controller utilise only XLR 5 sockets, the polarity of pins 1, 2 and 3 must be preserved as shown in the diagram. Do not connect pins 4 and 5.

pin 1= screening 0 volt
pin 2= data –
pin 3= data +

pin 4= not connected
pin 5= not connected

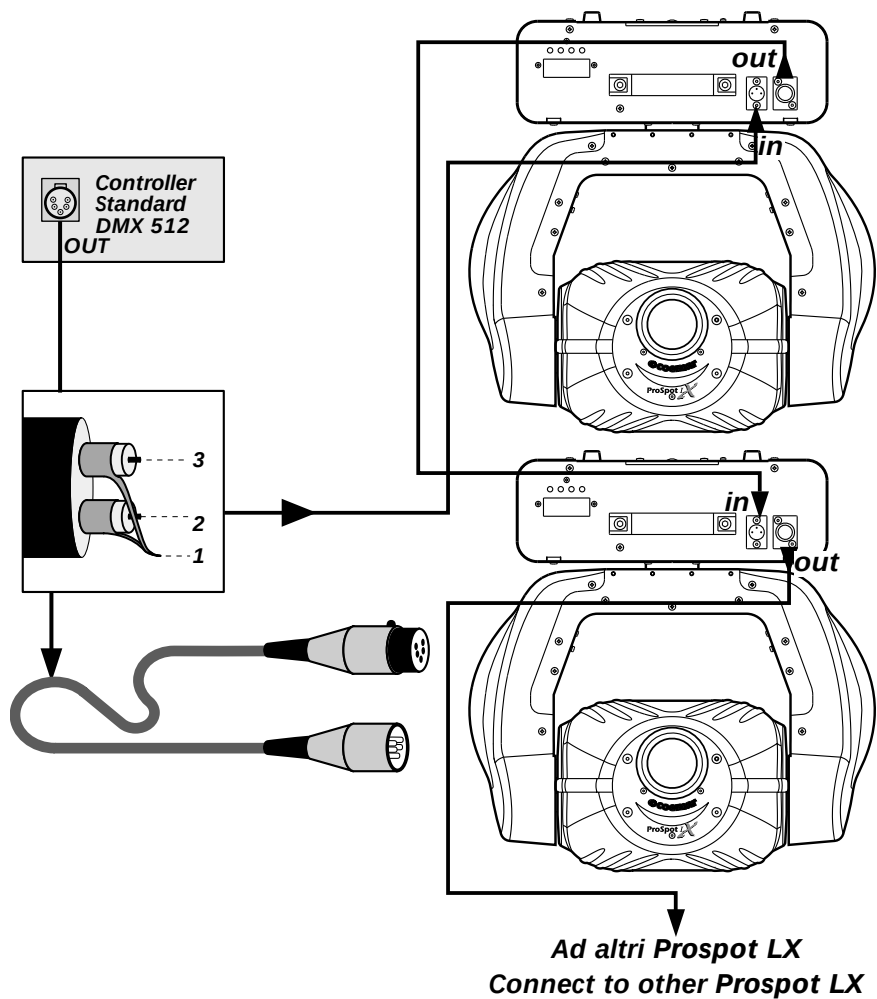

Ensure that all data conductors are isolated from one another and the metal housing of the connector.


Note: the housing of the cannon XLR 3 must be isolated.

9. Powering up

After having followed the preceding steps, turn on the DMX 512 controller which will be used to control the **ProSpot LX**; following this, turn on the power to the unit and turn on the unit's **power** switch. The projector will perform a reset function on all the internal and external motors. This will last some few seconds, after which it will be subject to the external signal from the controller.

DMX reception

The display will be static on to indicate that DMX 512 signal is being correctly received.

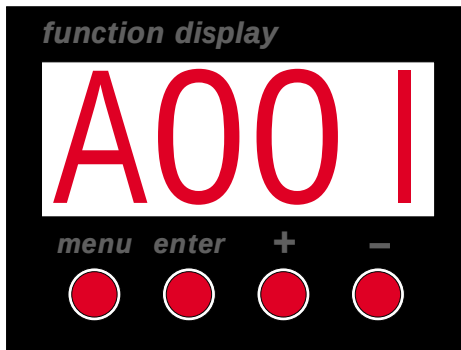

If the display flashes, the projector is not receiving signal. Check your cabling and the controller for correct functioning.

Software versions

Two software systems operate within the projector, one in the display system "**D**" and one in the master system "**M**". Upon startup, the projector's multifunction display panel will momentarily show readout of the software versions installed in your projector.

For example, in the **ProSpot LX** you may see:

D3.30 (display software "**D**" version 3.30).

M1.22 (master software "**M**" version 1.22.)

10. DMX addressing

Each **ProSpot LX** utilises **16** channels of **DMX 512** signal for complete control.

DMX addresses


To ensure that each projector accesses the correct signal, it is necessary to correctly address each fixture. Any number between 1 and 497 can be generated via the multifunction panel of the **ProSpot LX**.

This procedure must be carried out on every **ProSpot LX** being used.

When initially powered up, each projector will show **A001** indicating **DMX** address **1**. A projector thus addressed will respond to channels **1** to **16** from the **DMX 512** controller; a second unit should be addressed as **17**, a third as **33** and so on until the final **ProSpot LX**, has been addressed.

altering the dmx setting

- 1) Press the + or – buttons until the desired DMX address is displayed. The display will flash to indicate the selected address is not stored in memory

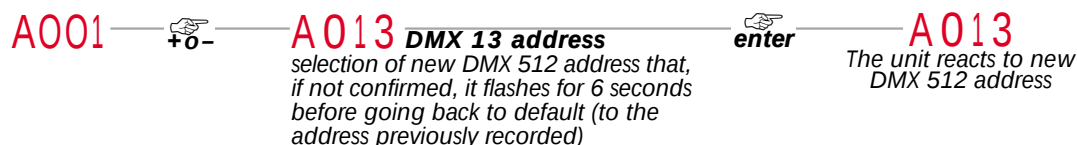

- 2) Press the enter button to confirm your selection; the display will stop flashing and the projector will now respond to the new DMX 512 setting.
- 3) To better understand the function of each channel, we refer you to 12 “DMX 512 channel functions”.

Important Note: Keeping the + or – buttons pressed will cause the display to alter at increased speed, allowing a faster selection to be effected.


11. Display panel functions

The display panel on the base of the **ProSpot LX** is used to display and set function information and various parameters and can enhance the operation of the projector to suit your particular application.

Altering the coemar factory settings may vary the functioning of the projector, causing to not respond to external DMX 512 signal. Please read and familiarise yourself with the following information very carefully before altering any selections.

NOTE: the  symbol is used throughout the following table to indicate the action of pressing the particular button referred to in the accompanying text.


A001  menu	 +o-	PD IR pan movement inversion To reverse horizontal movement direction of the beam on DMX level variation	 enter	 +o-	CW clockwise	 enter
				 +o-	CCW counter-clockwise	 enter
	 +o-	TDIR tilt movement inversion To reverse vertical movement direction of the beam on DMX level variation	 enter	 +o-	CW clockwise	 enter
				 +o-	CCW counter-clockwise	 enter
	 +o-	OPTO optic sensor deactivation Return in position of the unit if accidentally knocked out of place and ability to deactivate the function. Mechanical reset of the unit (opto OFF).	 enter	 +o-	ON sensors activation	 enter
				 +o-	OFF sensors deactivation	 enter
	 +o-	LAMP lamp control Lamp on/off control by DMX signal or lamp always on	 enter	 +o-	STRD lamp control by DMX 52	 enter
				 +o-	ON lamp always on	 enter
	 +o-	FANS fans control Fans always on (on) or fans function controlled through PCB (Stud).	 enter	 +o-	ON fans always on	 enter
				 +o-	STUD automatic control	 enter
	 +o-	DISP reverse display Reverse reading display (base downwards or base upwards)	 enter	 +o-	AA base downwards	 enter
				 +o-	VV reversed, base upwards	 enter
	 +o-	LED display control To disable display visualisation	 enter	 +o-	OFF to switch off the display ( any keys to switch it on)	 enter
	 +o-	DMX DMX chart To select function mode on DMX data reception	 enter	 +o-	STRD standard 16 channel (see diagram)	 enter
				 +o-	EMUL emulation ProSpot (not LX version - see diagram)	 enter

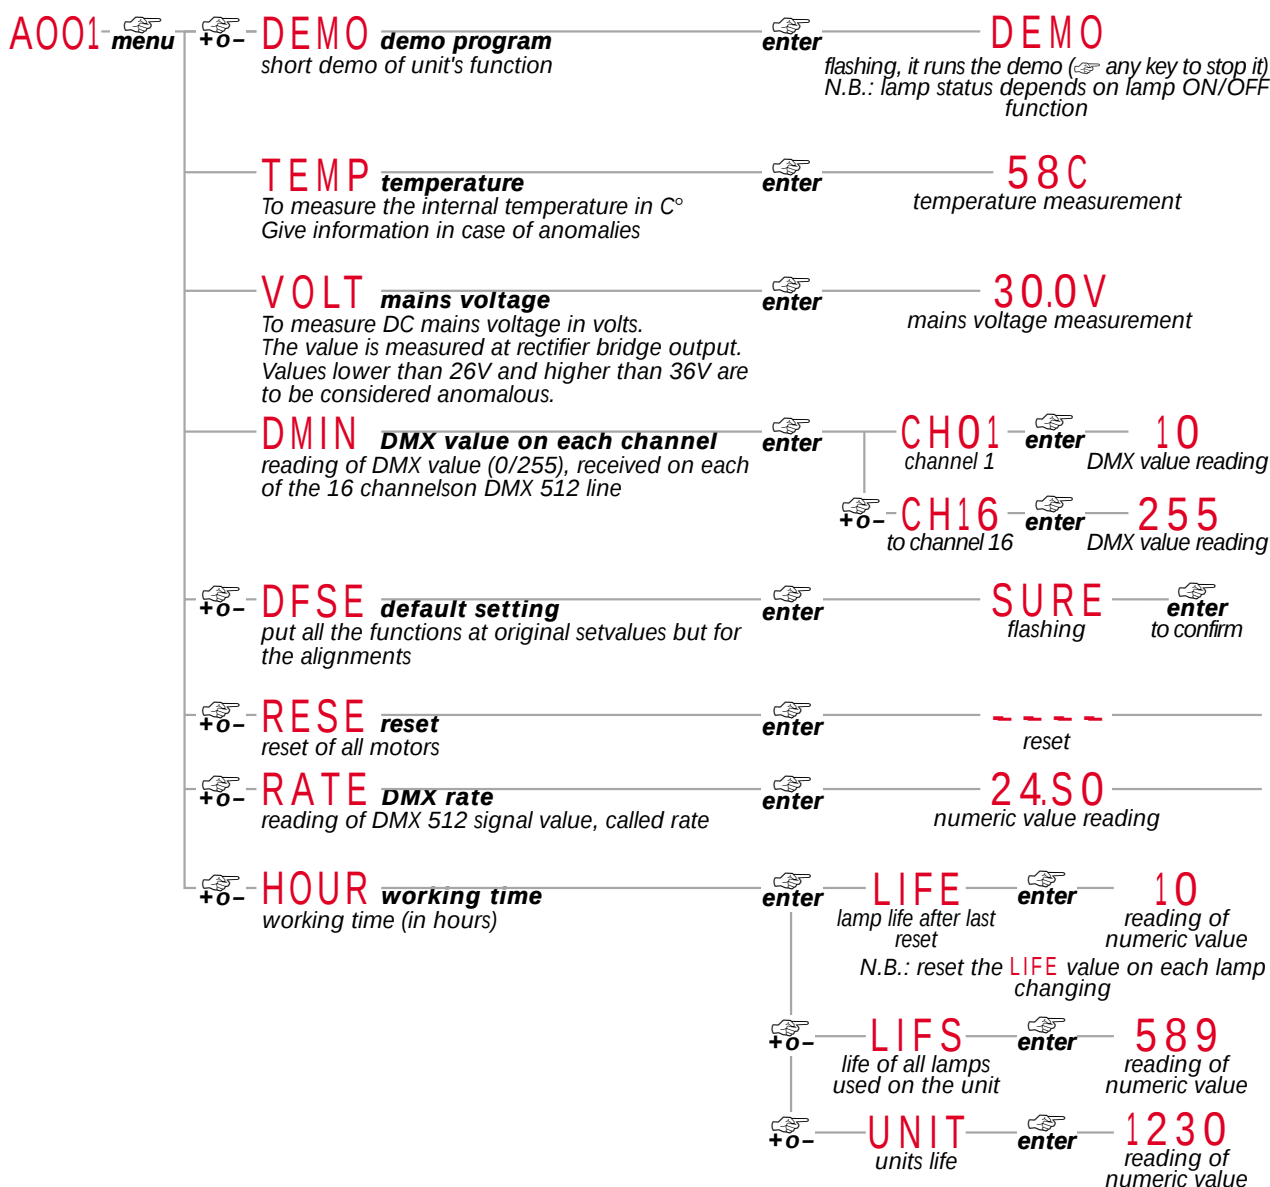

11.1. Turning on the ProSpot LX without articulated movement

This function may be useful should you need to turn on the **ProSpot LX**, whilst it is still in its flight case or located in cramped conditions in order to alter its dmx address setting or adjust some other parameter.

1) Turn on the projector whilst simultaneously holding down the **menu**, **enter** and **-** buttons.

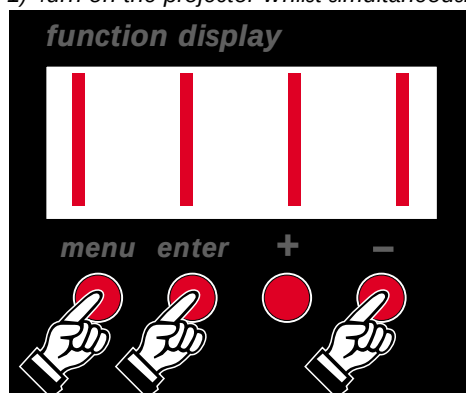

The projector will undertake a reset of all motors except those, which govern pan and tilt movement.

2) You may alter the dmx address or any other parameter at this point without any movement occurring.


3) To reactivate the normal functioning of the **ProSpot LX**, you need simply to turn the projector off and then on again via its **power** button, or simply perform a reset.

English

11.2. Resetting the electronic lamp life counter

The electronic lamp life counter should be reset to zero at every lamp change in order to provide accurate lamp life information.

- 1) Turn off the projector.
- 2) Power up the **ProSpot LX** whilst simultaneously holding down the **+** and **-** buttons.

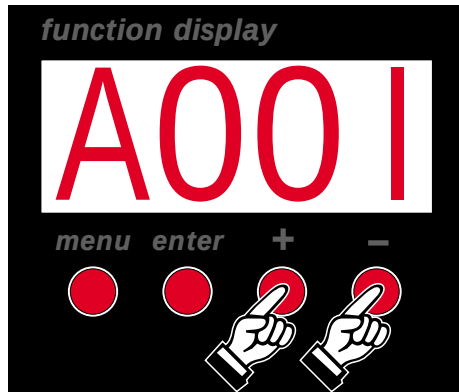

The projector will have performed a reset of the **LIFE** counter.


To check that this has occurred you may complete the following steps:

- 1) Press the **menu** button.
 - 2) Press the **+** or **-** buttons until **HOUR** is displayed.
 - 3) Press the **+** or **-** buttons until **LIFE** (for lamp life) is displayed.
 - 4) Press the **enter** button; the display will show **0000** confirming that a reset of the counter has occurred.
- N.B. You may also confirm if you choose that the **LIFS UNIT** and **UNIT** counters remain unaltered.

11.3. test

This function generates a test signal for each motor so that they can be tested in the absence of any external DMX source.

- 1) Press the **menu** button.
- 2) Press the **+** or **-** buttons until **TEST** (for test) is displayed.
- 3) Press the **enter** button to confirm your selection; the display will show **PAN** (for testing the pan movement), press the **+** or **-** subsequent tests, from **PAN** to **COLR**.

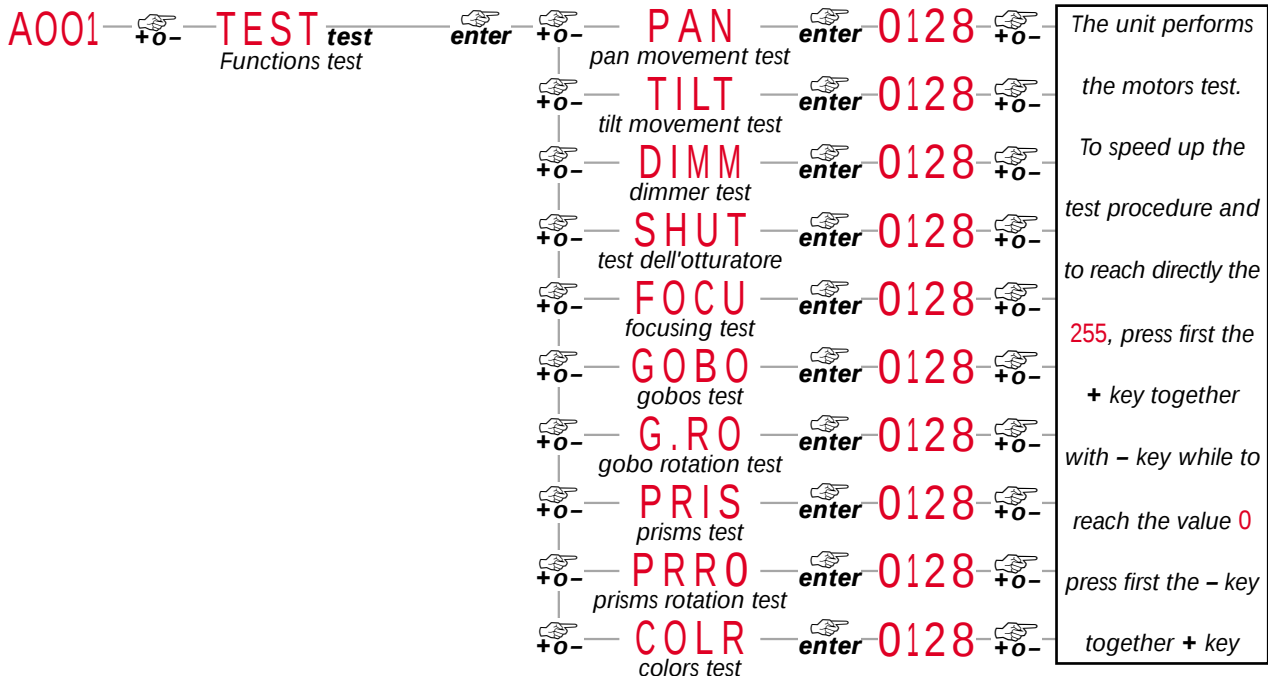

12. DMX 512 channel functions

If all the procedures have been carried out correctly to this point, your DMX 512 controller will have control over all the functions of the **ProSpot LX** as shown in the table below.


channel	function	type of control	effect	decimal
1	Base (pan) coarse	proportional	coarse control of the base movement	0-255
2	Base (pan) fine	proportional	fine control of the base movement	0-255
3	Yoke (tilt) coarse	proportional	coarse control of the Yoke movement	0-255
4	Yoke (tilt) fine	proportional	fine control of the Yoke movement	0-255
5	movement speed	step	standard (fast)	0-10
		step	Ultra fast movement (best for programming position)	11-25
		proportional	vector mode from fast to slow	26-127
		proportional	Tracking mode (fast to slow)	128-247
		step	Tracking mode (slow)	248-255
6	dimmer	step	closed	0-7
		proportional	Gradual adjustment of the dimmer intensity from 0 to 100%	8-255
7	Shutter, Strobe	step	Shutter closed	0-9
		proportional	Synchro strobe-effect from slow to fast (max. 10 flashes/second)	10-66
		step	Shutter open	67-68
		proportional	Pulse-effect in sequences, close slow, open fast (adjustement from slow to fast)	69-125
		step	Shutter open	126-127
		proportional	Pulse-effect in sequences, close fast, open slow (adjustement from fast to slow)	128-184
		step	Shutter open	185-187
		proportional	Random strobe-effect from slow to fast	188-244
		step	Shutter open	245-255
8	focus	proportional	proportional focus control	0-255
9	Rotating gobos, selection	step	Open	0-10
		step	Rot. gobo 1	11-30
		step	Rot. gobo 2	31-50
		step	Rot. gobo 3	51-70
		step	Rot. gobo 4	71-90
		step	Rot. gobo 5	91-110
		step	Rot. gobo 6	111-127
		proportional	From no gobo to gobo 6, 360° gobo positioning	128-192
		proportional	Gobo wheel rotation from slow to fast	193-255
10	gobo 360° positioning	step	no effect	0-10
		proportional	proportional indexable gobo positioning 360°	11-255
NOTE: when channel 10 is between 0 and10, channel 11 stop the rotation without indexing the gobo				
11	gobo rotation	step	no effect	0-10
		proportional	continuos gobo rotation clockwise with proportional speed from fast to slow	11-131
			gobo stop	132-134
		proportional	continuos gobo rotation counter-clockwise with proportional speed from slow to fast	135-255
12	3 facet prism & rotation	step	no prism	0-10
		step	3 facet prism	11-20
		proportional	continuos prism rotation clockwise with proportional speed from fast to slow	21-136
			prism stop	137- 139
		proportional	continuos prism rotation counterclockwise with proportional speed from slow to fast	140-255

English

channel	function	type of control	effect	decimal
13	colours	step	Open/white	0
		step	colour 1	5-9
		step	colour 2	10-14
		step	colour 3	15-19
		step	colour 4	20-24
		step	colour 5	25-29
		step	colour 6	30-34
		step	colour 7	35-39
		step	colour 8	40-44
		step	colour 9	45-49
		step	colour 10	50-54
		step	colour 11	55-59
		proportional	From white to colour 11, 360° color positioning	60-127
		proportional	Forwards rainbow effect from fast to slow	128-190
		step	No rotation	191-192
		proportional	Backwards rainbow effect from slow to fast	193-255
14	gobo shake and black-out effect	step	No effect	0-9
		proportional	gobo shake slow to fast	10-249
		step	Black-out while PAN,TILT moving, color or gobo changes	250-255
15	gobo shake amplitude	step	gobo shake maximum size	0-23
		step	gobo shake size 2	24-47
		step	gobo shake size 3	48-71
		step	gobo shake size 4	72-95
		step	gobo shake size 5	96-119
		step	gobo shake size 6	120-143
		step	gobo shake size 7	144-167
		step	gobo shake size 8	168-191
		step	gobo shake size 9	192-215
		step	gobo shake size 10	216-239
		step	gobo shake minimum size	240-255
16	Lamp ON, motor Reset	step	lamp off	0-19
		step	no effects (idle)	20-100
		step	effects reset (only once), pan/tilt does not move	101-170
		step	all motor reset (only once)	171-200
		step	silent fans (if external temperature allowed)	201-240
		step	Lamp ON	241-255
Back panel can modify function channel (16) (inhibit lamp off)				
note 1: function channel (16) has a delay time of 6 second to prevent accidental activation.				
note 2 :on/off lamp mode is not affected unless an opposite value is received				

ProSpot emulation setting

ProSpot LX may operate using a different channel configuration to the standard set up. This function may be useful in situations where you may be using other **ProSpot** projector which are not in the LX series or when using various controllers with inflexible channel assignment features. To utilise this altered configuration as shown in the table, which follows, you should:

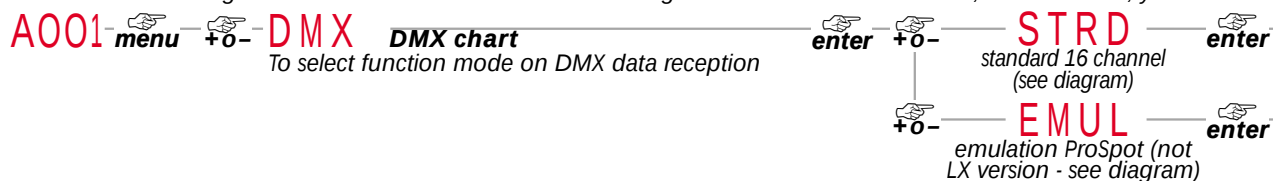

Following is the **ProSpot** emulation table.

channel	function	type of control	effect	decimal
1	Base (pan) coarse	proporzionale	coarse control of the base movement	0-255
2	Yoke (tilt) coarse	proporzionale	coarse control of the Yoke movement	0-255
3	Base (pan) fine	proporzionale	fine control of the base movement	0-255
4	Yoke (tilt) fine	proporzionale	fine control of the Yoke movement	0-255
5	Speed pan/tilt movement	livello unico	Max speed (tracking mode)	0
		proporzionale	Max speed from max. to min. vector mode)	1-249
		livello unico	Max. speed, black-out while PAN,TILT moving or color changes (tracking mode)	250-255
6	lamp on/off, reset, fans speed control	livello unico	open, max. speed of fan	0
		proporzionale	open, min. speed of fan (silent operation) from 0 to 127 decreasing speed of fan	1-127
		livello unico	Lamp ON, reset, open position	128-139
		livello unico	No function	140-229
		livello unico	Lamp Off after 3 sec.	230-239
		livello unico	No function	240-255
7	colours	proporzionale	Open/white	0
		proporzionale	colour 1	10
		proporzionale	colour 2	21
		proporzionale	colour 3	32
		proporzionale	colour 4	42
		proporzionale	colour 5	53
		proporzionale	colour 6	64
		proporzionale	colour 7	74
		proporzionale	colour 8	85
		proporzionale	colour 9	96
		proporzionale	colour 10	106
		proporzionale	colour 11	117
		proporzionale	Forwards rainbow effect from fast to slow	128-189
		livello unico	No rotation	190-193
		proporzionale	Backwards rainbow effect from slow to fast	194-255
8	no function	livello unico	No function	0-255
9	effect-wheel	livello unico	Open position (hole)	0-95
		livello unico	3 - facet rotating prism	96-159
		livello unico	Prism/Gobo macros	160-255
		livello unico	Macro 1	160-167
		livello unico	Macro 2	168-175
		livello unico	Macro 3	176-183
		livello unico	Macro 4	184-191
		livello unico	Macro 5	192-199
		livello unico	Macro 6	200-207
		livello unico	Macro 7	208-215
		livello unico	Macro 8	216-223
		livello unico	Macro 9	224-231
		livello unico	Macro 10	232-239
		livello unico	Macro 11	240-247
		livello unico	Macro 12	248-255

English

channel	function	type of control	effect	decimal
10	3 facet prism rotation control	<i>livello unico</i>	No rotation	0
		<i>proporzionale</i>	Forwards rotation from fast to slow	1-126
		<i>livello unico</i>	No rotation	127-128
		<i>proporzionale</i>	Backwards rotation from slow to fast	129-255
11	Rotating gobos, selection	<i>livello unico</i>	Open	0-31
		<i>livello unico</i>	Rot. gobo 1	32-63
		<i>livello unico</i>	Rot. gobo 2	64-95
		<i>livello unico</i>	Rot. gobo 3	96-127
		<i>livello unico</i>	Rot. gobo 4	128-159
		<i>livello unico</i>	Rot. gobo 5	160-191
		<i>livello unico</i>	Rot. gobo 6	192-223
		<i>livello unico</i>	Rot. gobo wheel cont. rotation slow to fast	224-255
12	Gobo rotation & fine positioning	<i>proporzionale</i>	Gobo indexing	0-127
		<i>proporzionale</i>	Forwards gobo rotation from fast to slow	128-190
		<i>livello unico</i>	No rotation	191-192
		<i>proporzionale</i>	Backwards gobo rotation from slow to fast	193-255
13	no function		no function	0-255
14	Focus	<i>proporzionale</i>	Proportional focus control	0-255
15	Shutter, Strobe	<i>livello unico</i>	Shutter closed	0-31
		<i>livello unico</i>	No function (Shutter open)	32-63
		<i>proporzionale</i>	Strobe-effect from slow to fast (max. 10 flashes/second)	64-95
		<i>step</i>	No function (Shutter open)	96-127
		<i>proporzionale</i>	Pulse-effect in sequences	128-159
		<i>step</i>	No function (Shutter open)	160-191
		<i>proporzionale</i>	Random strobe-effect from slow to fast	192-223
		<i>step</i>	No function (Shutter open)	224-255
16	Dimmer intensity	<i>proporzionale</i>	Gradual adjustment of the dimmer intensity from 0 to 100%	0-255

13. Aligning the lamp in the optical system

Alignment is necessary to compensate for the slight variations in the mechanical construction of respective lamps due to the fact that may discharge lamps are still partly constructed manually.

The procedure should be undertaken to properly align the lamp in the optical system, thus avoiding the possible overheating of internal components due to incorrect focusing of the beam onto components which are not designed to be exposed to this.

Alignment procedure

Manipulating the two adjusters **A** and **B** contemporaneously effects alignment; with the lamp on and blackout shutter dimmer and no filters placed in the optical path. The procedure flattens the beam to produce an even beams spread

Axial adjustment

Adjuster (**A**) acts on a lever and spring assembly to position the lamp axially within the reflector. Rotate the adjuster (**A**) until the beam produced is flat and even.

Horizontal adjustment

Adjuster (**B**) acts on a lever and spring assembly to position the lamp horizontally within the reflector. Rotate the adjuster (**B**) until the beam produced is as required.



14. Automatic repositioning features

An encoder system based on 4 position indicators allows the **ProSpot LX** to return to its correct position if it is accidentally moved during operation.

This is particularly useful if the projector is to be mounted on the floor in a position where the performer or artist or technician may accidentally bump the unit.


A001  **menu**  **+0-** **OPTO** **optic sensor deactivation**  **enter**  **+0-** **ON**  **enter**
 Return in position of the unit if accidentally knocked out of place and ability to deactivate the function. Mechanical reset of the unit (opto OFF).
 **+0-** **OFF**  **enter**
 sensors activation
 sensors deactivation

15. Gobo replacement

ProSpot LX allows gobos to be replaced via a simple gobo retention spring system. Replacement gobos should be manufactured from either dichroic glass or metal. The **coemar** reseller network carries a wide range of replacement gobos.

Opening up the projector:

- 1) Using a Philips head screwdriver, remove the four screws located at both the front and rear of the projector head which affix the top housing and those for the bottom housing, as shown in the diagram below:

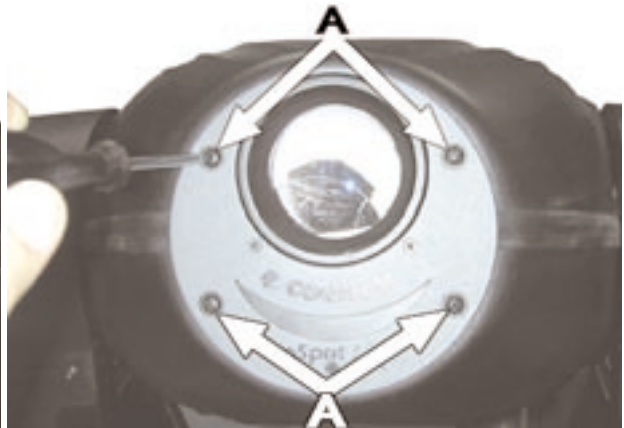


Replacing gobos on the rotating gobo wheel


Gobos may be replaced as required to produce special effects as required.

Gobo replacement should always be carried out with the power to the unit shut off and the housing removed as described in section 16 "Maintenance".

- 1) Rotate the gobo wheel until you locate the gobo you wish to remove.

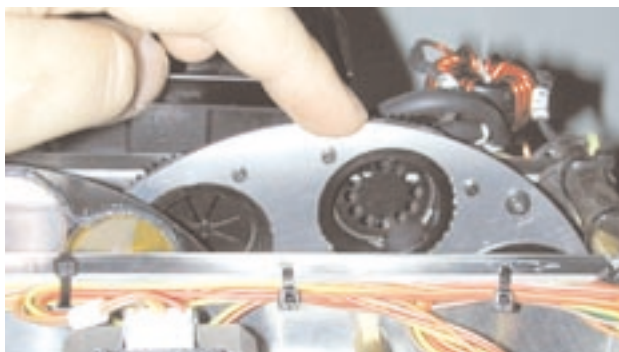

- 2) Remove the retaining spring and remove and replace the gobo.

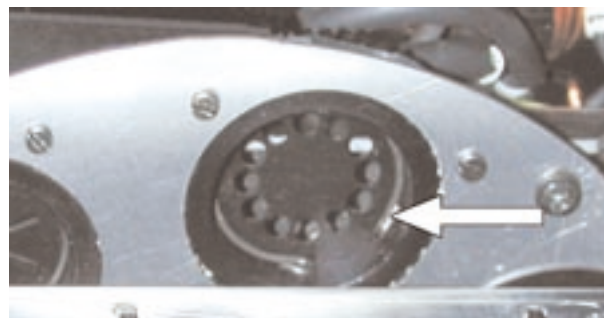

- 3) Replace the retaining spring, ensuring that it is seated correctly.


16. Altering the operating voltage and frequency (Reserved for technical staff only)

If the operating voltage and frequency as preset by coemar does not correspond to that of the country in which you are operating, you may alter the preset by following the instructions in the paragraphs which follow.


An error in voltage or frequency selection may seriously compromise the correct functioning of the projector.

16.1 Selecting the voltage on the autotransformer

- 1) Using a Philips head screwdriver, remove the 6 screws (A) on the lateral cover of the fixture's base as shown in the diagram below, thereby removing the cover and obtaining access to the internal features of the **ProSpot LX** base.

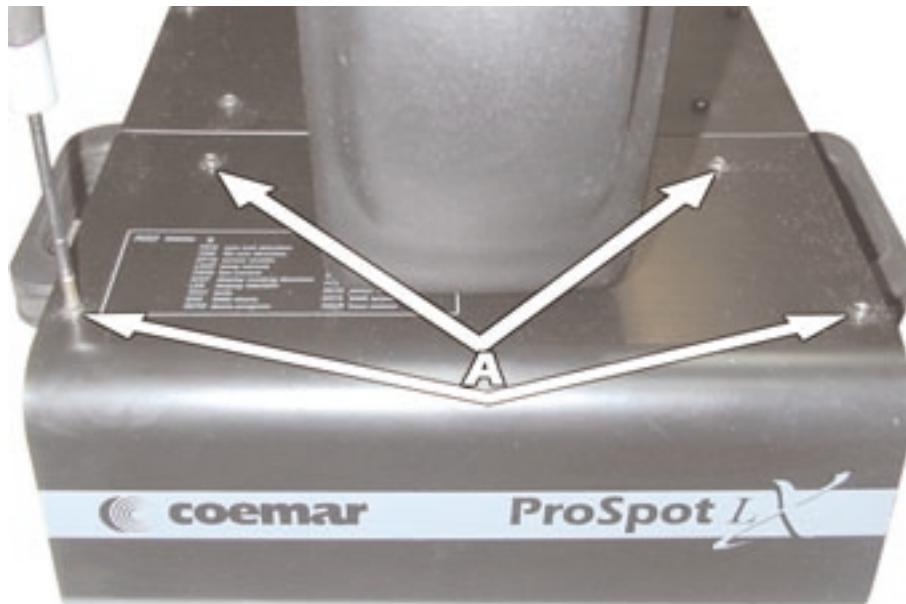

- 2) Locate the autotransformer (B) on the right of the base.

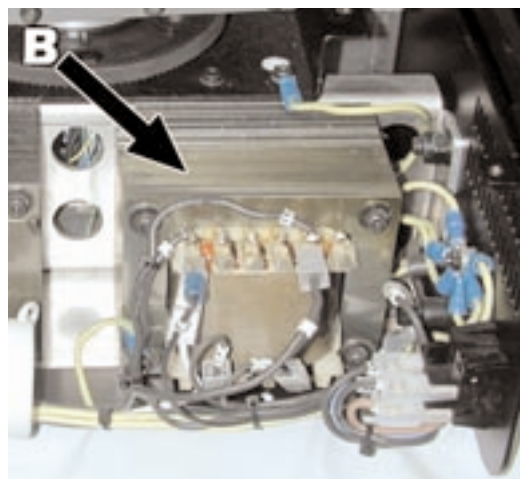


English

- 3) Select the operating voltage from the 100, 115, 208, 230 and 245V options by moving the cable n° 7 to the required voltage. To ensure correct positioning of the cable, refer to the label located on the transformer.




- 4) If the voltage is altered to either 100 or 115V replace the current fuse rated at 5 Amps T, which is suitable for 208/230/245 V, with a fuse rated at 8 Amps T. The fuse holder is located on the side of the base of the unit. The reverse should be undertaken if the voltage is being increased to the latter range.

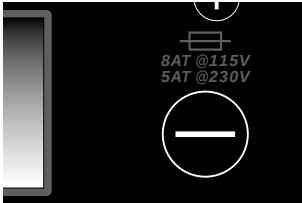

- 5) Proceed to the selection of the proper frequency, as described in the following section, and then replace the cover and refasten the screws (A).

16.2 Selecting the frequency on the power supply of the ProSpot LX

- 1) Locate the power supply (A) locate in the base of the unit.

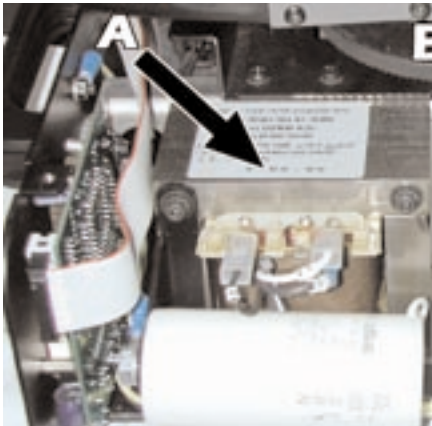

- 2) Select the required frequency from between 50 and 60Hz by moving cable n° 11 to the correct option. To ensure correct positioning of the cable, refer to the label located on the power supply.



- 4) Replace the cover and refasten the screws (A).

17. Maintenance


Whilst every possible precaution has been taken to ensure the trouble-free operation of your **ProSpot LX**, the following periodic maintenance is highly recommended. Prior to undertaking any maintenance procedure, make sure the fixture is disconnected from mains power.

Attention

Disconnect mains power prior to opening the housing!

Opening the housing:

- 1) Using a Philips head screwdriver, remove the four screws located at both the front and rear of the projector head which affix the top housing and those for the bottom housing, as shown in the diagram below:

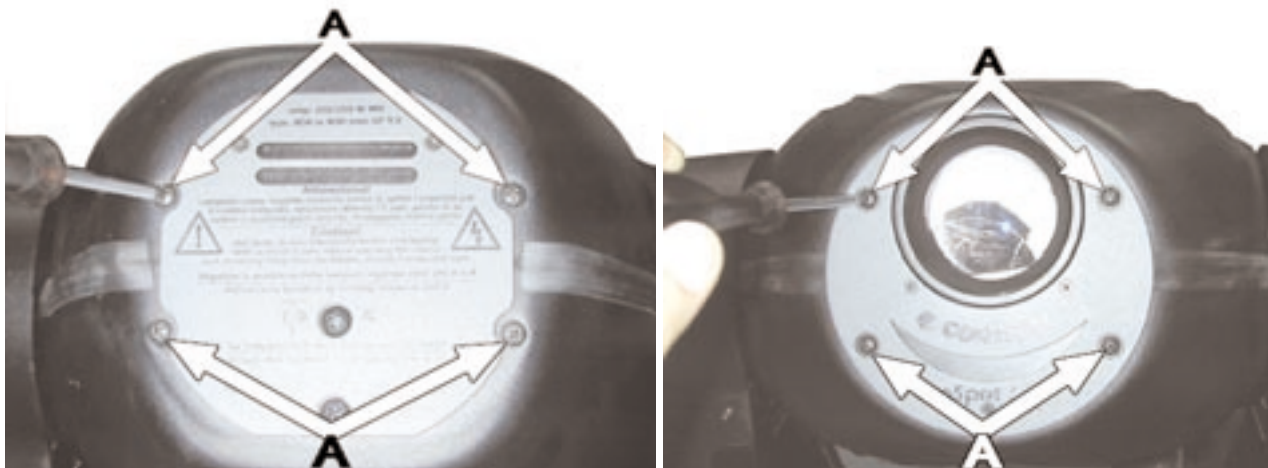

Fuse replacement

Locate the 3 protection fuses:

Two are located on the master circuit board and protect the lamp circuit and the electronics. A third is located externally on the side of the base of the projector and offers protection to the entire projector.

Use a multimeter to check the condition of the fuses, replacing them with fuses of similar value if required.

Periodic cleaning

Lenses and reflectors

Even a fine layer of dust can reduce the luminous output substantially. Regularly clean all lenses and the reflector using a soft cotton cloth, dampened with a specialist cleaning solution.

Fans and air passages

The fans and air passages must be cleaned approximately every 6 weeks; the period for this cleaning will depend, of course, upon the conditions in which the projector is operating. Suitable instruments for performing this type of maintenance are a brush and a common vacuum cleaner or an air compressor.

Periodic maintenance

Lamp

The lamp should be replaced if there is any observable damage or deformation due to heat. This will avoid the danger of the lamp exploding.

Mechanicals

Periodically check all mechanical devices for wear and tear; gears, guides, belts, etc, replacing them if necessary. Periodically check the lubrication of all components, particularly the parts subject to high temperatures. If necessary, lubricate with a suitable lubricant, available from your coemar distributor.

Electrical components

Check all electrical components for correct earthing and proper attachment of all connectors, refastening if necessary.


18. Electronic alignment of motors

Attention

These procedures should only be carried out by qualified technicians or other specialists

The display panel on the **ProSpot LX** allows for the electronic alignment of the projector's motors. This procedure is performed by **coemar** at the factory. It may be useful to perform this procedure in the case of internal components being replaced. Altering the factory settings may radically alter the functioning of the projector. Carefully read all of the following prior to attempting any changes.

A001

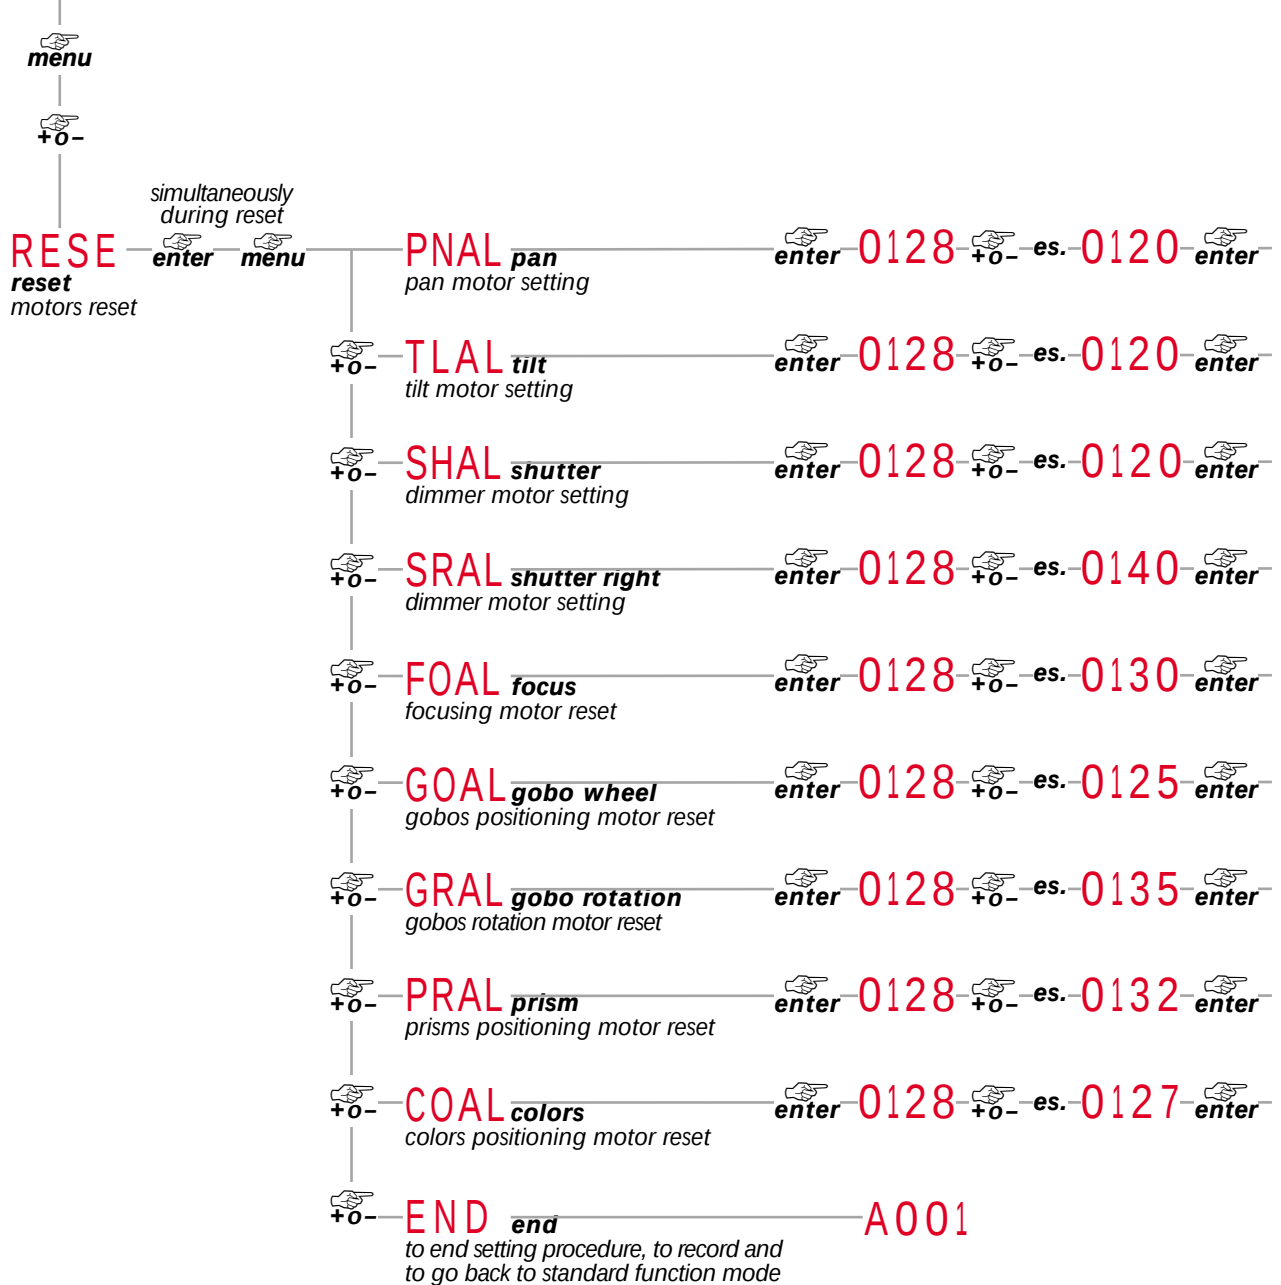

simultaneously

+ - 0128

NOTE:

To speed up setting/alignment procedure, press simultaneously keys **+** and **-**; the display will automatically go to 128

19. Error messages

MBER:	COMMUNICATION error <i>This message indicates that the motherboard within the unit is not communicating properly with the control source. Check the connectors located on both boards.</i>
OPER:	PAN ENCODER error <i>This message indicates that there is a problem with the PAN encoders. Check the sensors on the encoder wheel located near the pan movement motor, as well as the relevant cabling.</i>
OTER:	TILT ENCODER error <i>This message indicates that there is a problem with the TILT encoder locate on the fixture yoke. Check the sensors on the encoder wheel located near the pan movement motor, as well as the relevant cabling.</i>
SNER:	LINE SYNCHRONISATION error <i>Check and replace opto-isolator U9.</i>
LAER:	LAMP error <i>The lamp has turned off unexpectedly, without any signal from the controller to do so. The system may have exceeded the allowable number of attempts to ignite the lamp (7) after which number the system is designed to protect ignitor, cabling and the lampholder by reducing the incidence of lamp ignition voltages to these components. Check and eventually replace the lamp if it is faulty, damaged, or has exceeded its lamp life.</i>
EPER:	EEPROM error <i>The EEPROM is either defective or absent; refer to your coemar service centre for a replacement component.</i>
DTER:	DATA error <i>The initial parameter settings are incorrect or corrupt; the projector has reloaded its factory default settings. Turn the projector off and on again. Should the error reoccur, refer the unit to your authorised coemar service centre to have the EEPROM check and possibly replaced.</i>
SCER:	COLOUR SENSOR CIRCUIT error <i>Check the cabling and the sensor on the COLOUR wheel, the sensor and circuit board indicate an error.</i>
SGER:	GOBO and PRISM SENSOR CIRCUIT error <i>Check the cabling and the sensor on the GOBO and PRISM wheel, the sensor and circuit board indicate an error.</i>
COER:	COLOUR WHEEL POSITION error <i>Check the functioning and correct positioning of the magnetic colour wheel sensor.</i>
RGER:	GOBO WHEEL POSITION error <i>Check the functioning and correct positioning of the magnetic gobo wheel sensor.</i>
IGER:	GOBO INDEXING error <i>Check the functioning and correct positioning of the gobo indexing sensor.</i>
PRER:	PRISM INSERTION error <i>Check the functioning and correct positioning of the prism insertion sensor.</i>
ER20 ÷ ER99:	SYSTEM errors <i>Turn the unit off and on again. If the error persists, contact your authorised coemar service centre.</i>
HEAT:	LAMP OVERHEAT indicator <i>The projector is attempting to ignite a lamp, which is still too hot to strike. Wait until the lamp has cooled further and then attempt to reignite the lamp.</i>

20. Spare parts

All the components of the **ProSpot LX** are available as replacement parts from your authorised **coemar** sales agent. Accurate description of the fixture, model number, and type will assist us in providing for your requirements in an efficient and effective manner.



coemar spa

*via Inghilterra
46042 Castelfredò (Mantova) Italy
Tel. 0376/77521
Fax 0376/780657*

coemar si riserva il diritto di apportare modifiche senza preavviso.
coemar reserves the right to effect modifications without prior notification.

*manuale istruzioni
instruction manual*

ProSpot LX

*1^a edizione gennaio 2001
1st edition january 2001*